

# Assembly Instructions

## ECONOMY LINE WORK BENCHES

**MODELS**  
**UB · SERIES / LWB · SERIES**  
**1W810B**  
**1W811B    1W888B**


03685

### PARTS LIST

REFERENCE LETTER	QUANTITY AND DESCRIPTION	PART NUMBER 1W810B	PART NUMBER 1W811B	PART NUMBER 1W888B
A	<input type="checkbox"/> 2 Leg Assembly	1W810BLA	1W810BLA	1W810BLA
B	<input type="checkbox"/> 2 Top Stringer	1W810BTS	1W811BTS	1W888BTS
C	<input type="checkbox"/> 1 Compressed Wood Top	1W810B-TOP	1W811B-TOP	1W888B-TOP
D	<input type="checkbox"/> 1 Lower Shelf	1W810BLS	1W811BLS	1W888BLS
E	<input type="checkbox"/> 4 Adjustable Leg Section	1W810ALS	1W810ALS	1W810BALS
*	<input type="checkbox"/> 20 1/4 x 20 x 1/2 Nuts/Bolts	NB20S	NB20S	NB20S
*	<input type="checkbox"/> 10 Wood Screws	1W810BWS	1W810BWS	1W810BWS
*	<input type="checkbox"/> Standard Hardware Item Available			

### HOW TO ASSEMBLE UNITS

- Note that leg sections (A) are pre-welded so that no assembly is required. Slide leg adjustment Section (E) over each leg, position to desired height and bolt to leg.
- Bolt front end and rear cross members (B) to legs and bolt hole points in face of each leg. Bolt lower shelf (D) to lower cross members.
- Lay top down on floor or on horses and set bolted steel frame assembly over top (C) allow overhang around all four sides. Use wood screws furnished and fasten top down to upper frame.
- Set Bench in upright position.
- Check all bolts and tighten again.

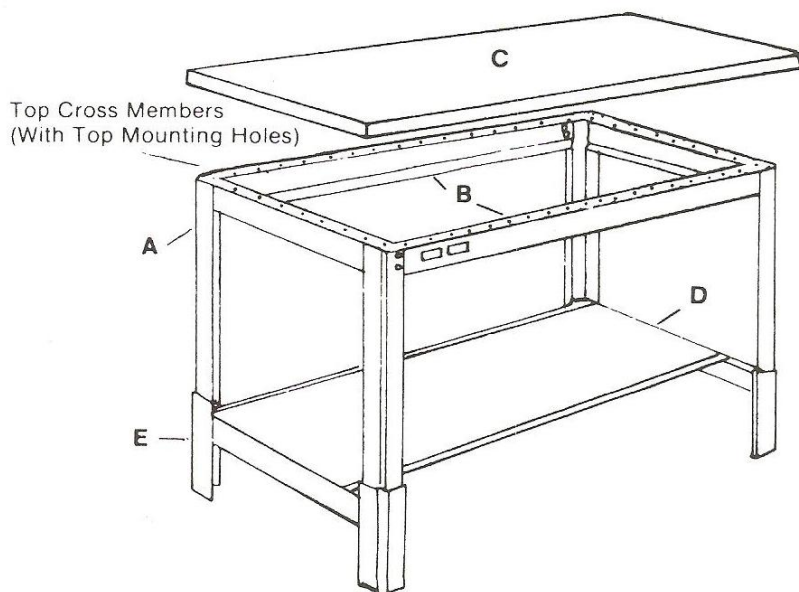

**edsal**

4400 south packers avenue • chicago, illinois 60609